



IMPORTANT INSTALLATION INSTRUCTIONS




Know Your Gas Hob

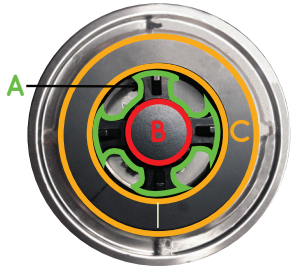


A - Burner
B - Inner cap
C - Outer cap

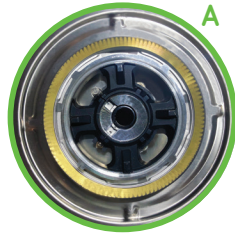

Step 1 : Position Burner (A) well so that the white ignitor and brass thermocouple fit exactly into the grooves. Ensure burner sits flat without wobbling.

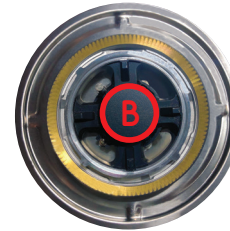


Step 2 : Fit inner cap (B) exactly at the center of the burner and ensure it sits flat without wobbling.

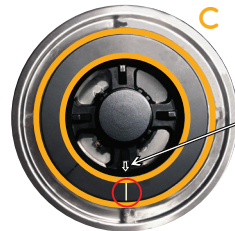

Step 3 : Place outer cap (C) and ensure coloured line on outer cap aligns with arrow mark on burner. When correctly placed, a groove under the coloured line will fit perfectly with the burner.

Battery Replacement

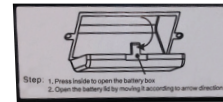

Locate battery cover at the underside of gas hob. Pull cover downwards. Replace with Type D battery.

After Sales Support

Phone: 6250 6888 Email: helpdesk.sg@whirlpool.com
Warranty Registration: <https://www.aristonchannel.com.sg/warranty-registration.php>
Maintenance tips and troubleshooting guide are available in the user guide.

